



ALL10124 Jack Stands

OPERATION AND SPECS

Read complete sheet **BEFORE** operating jack stands!

OPERATION:

1. Always refer to vehicle owner's manual for proper jacking procedure. Lift only on areas of vehicle as specified by the vehicle manufacturer.
2. Position stands under vehicle at points specified by vehicle manufacture capable of supporting load.
3. To adjust stands hold Control Lever up while lifting Saddle Shaft to desired height. Push Control Lever down to lock Ratchet Pawl into teeth located on the Center Column.
4. Carefully lower load down onto stands.


MAINTENANCE AND INSPECTION:

1. Visually inspect stands before each use. Check for cracked welds and missing or damaged parts. Any stand that appears to be damaged in any way should be removed from service immediately.
2. Due to potential hazards associated with misuse of this product, no replacement shall be made.

SAFETY:

1. Failure to follow these warnings may result in damage to jack stands or personal injury.
2. Do not overload jack stands beyond rated capacity. Overloading can cause damage or failure of the jack stands and/or personal injury.
3. Always position load on center of Saddle Shaft. Always use stands in pairs placed only on a hard level surface. Use of stands on unstable surfaces can result in severe instability and possible loss of load.

Capacity (Ton)	Minimum Height	Maximum Height	Base Dimension
3	11-7/16"	16-1/2"	7-3/4" x 6-7/8"

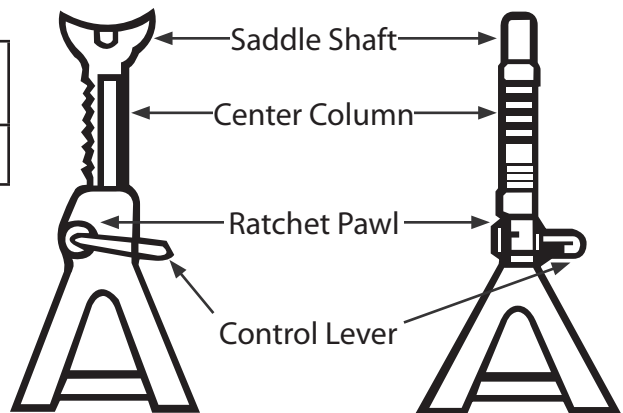

Allstar Performance 8300 Lane Dr., Watervliet, MI 49098
Phone: (269) 463-8000 Fax: (800) 772-2618 www.allstarperformance.com