



Pistol Grip Grease Gun

CARTRIDGE LOADING INSTRUCTIONS

1. Rotating counter clockwise, unscrew head cap from gun barrel. (Fig. 1)

Note – Due to lack of lubrication on the rubber plunger, new grease guns may be difficult to load with grease cartridges the first time. Apply a liberal coating of grease to plunger when using gun for the first time. This grease gun requires a 14 oz. grease cartridge.

2. Draw the handle back fully so that the plunger rod catches and locks into place. (Fig. 2)

Caution: Depressing the lock release when empty causes the handle to snap back quickly.

3. After removing the plastic cap from the 14 oz. grease cartridge, apply a small amount of grease to the inside edge of the cartridge. This will make insertion of the plunger easier. (Fig. 3)

4. Push grease cartridge into the gun barrel completely, until metal edge tightly seals top of the grease gun barrel.

Detach flip-top seal from cartridge. (Fig. 4) **Caution: Flip-top and inner edges of the tube are sharp.**

5. Screw on head cap approximately two turns, being sure not to tighten. Release plunger rod from its locked position and push in. Push on plunger rod handle to force plunger into cartridge. At the same time, pump the lever or handle to release trapped air. When grease comes through vents and the head of the gun, fully tighten the head cap to the barrel.

6. As soon as the gun is pumping grease, carefully depress the lock release and push the plunger rod the rest of the way into the gun.



Fig. 1

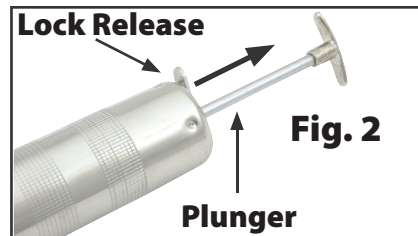


Fig. 2

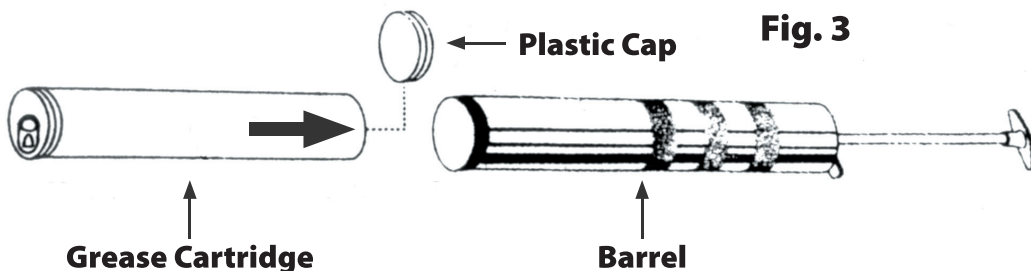


Fig. 3

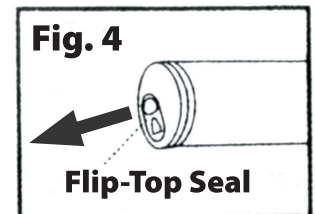


Fig. 4

Allstar Performance 8300 Lane Dr., Watervliet, MI 49098
Phone: (269) 463-8000 Fax: (800) 772-2618 www.allstarperformance.com