



# Filter Cleaning Station

## ASSEMBLY AND CLEANING OPERATION

### Contents:

Description	Quantity
Base Stand	1
Filter Basket	1
Hex Bolt	1



### Assembly:


Bolt filter basket to the base stand using supplied hardware. Do not overtighten, filter basket should spin freely.

### Cleaning Operation:

Insert dirty air filter into the filter basket. Spray filter with a cleaner or degreaser as recommended by filter manufacturer and allow to soak for a few minutes or more as needed. Using a garden hose, spray to the inside of filter in a downward direction at about 3-4 o'clock until the filter basket begins to rotate. Flush until clean. The total cleaning process should only take minutes depending on the condition of air filter.

Allow filter to dry completely, rotating as necessary. Once filter is dry use stand to rotate filter for even application of filter oil, if applicable.

Note: Cleaning operation is a basic guide. Always refer to OEM filter cleaning instructions for specific cleaning and maintenance steps.

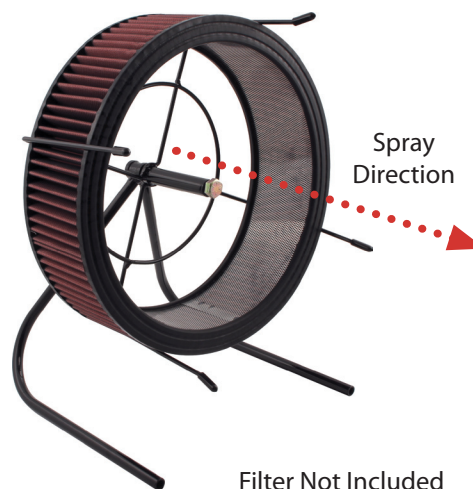

### Caution:

- High pressure water can damage an air filter.
- Unit is for use with washable filter elements only.
- Paper element filters may be destroyed.
- During cleaning process, position stand away from anything electrical. Basket rotation creates a secondary spray of water.
- Hold garden hose near the center of the filter to avoid contact with basket arms while they are rotating.

**Allstar Performance 8300 Lane Dr., Watervliet, MI 49098**  
**Phone: (269) 463-8000 Fax: (800) 772-2618 [www.allstarperformance.com](http://www.allstarperformance.com)**