



Starter Solenoid For ALL80520

INSTALLATION INSTRUCTIONS

1. Remove starter motor wire from solenoid.
2. Remove the two bolts which secure the solenoid housing.
3. Remove solenoid. Take care to leave the coil spring and plunger in the starter housing. This makes the job much easier.
4. Install the new solenoid and shims. Note the two small holes on the solenoid that the spring engages into.
5. Replace bolts and starter motor wire.

**Allstar Performance 8300 Lane Dr., Watervliet, MI 49098
Phone: (269) 463-8000 Fax: (800) 772-2618 www.allstarperformance.com**

Form 1061

Page 1 of 1

Rev. 043008

Starter Solenoid For ALL80520

INSTALLATION INSTRUCTIONS

1. Remove starter motor wire from solenoid.
2. Remove the two bolts which secure the solenoid housing.
3. Remove solenoid. Take care to leave the coil spring and plunger in the starter housing. This makes the job much easier.
4. Install the new solenoid and shims. Note the two small holes on the solenoid that the spring engages into.
5. Replace bolts and starter motor wire.

**Allstar Performance 8300 Lane Dr., Watervliet, MI 49098
Phone: (269) 463-8000 Fax: (800) 772-2618 www.allstarperformance.com**

Form 1061

Page 1 of 1

Rev. 043008